NAUTIZ X9


QUICK START GUIDE



handheld

1 WHAT'S IN THE BOX

The pictures shown below may differ from the actual products. To purchase additional or optional products, contact our customer center.



Nautiz X9 Main Body





Standard Battery USB Cable



Adaptor

2 YOUR NAUTIZ X9

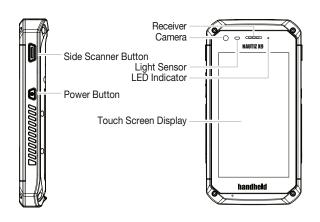

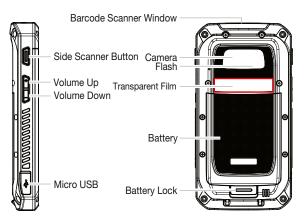

(3) INSERT/REMOVE BATTERY

To insert the battery


1. Insert the battery.



The battery is secured by a red slider. Move the slider to the right to unlock the battery.



2. Slide the battery lock up.



To remove the battery

1. Slide the battery lock down.




2. Remove the battery.



4 INSERTING/EXRTRACTING SIM/MICRO SD CARD

This is how you insert and remove the SIM/micro SD.

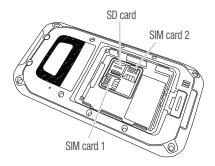

5 USING SCANNER

Using scanner

Press the [Side Scanner] button to start scanning.





Scanning Barcode

To scan a barcode, keep a distance of about 10 cm between the barcode and the barcode scanner window and scan the barcode at the correct angle.



6 POWERING ON/OFF

Press the [Power] button on the side of the terminal to turn it on/off.



7 BATTERY CHARGING

Use supplied power adapter to charge the Nautiz X9.

Please go to www.handheldgroup.com/knowledgebase to download more information.

Google, Android and Google Play are trademarks of Google LLC.

